



Top View Installation instructions for Skillion roofs

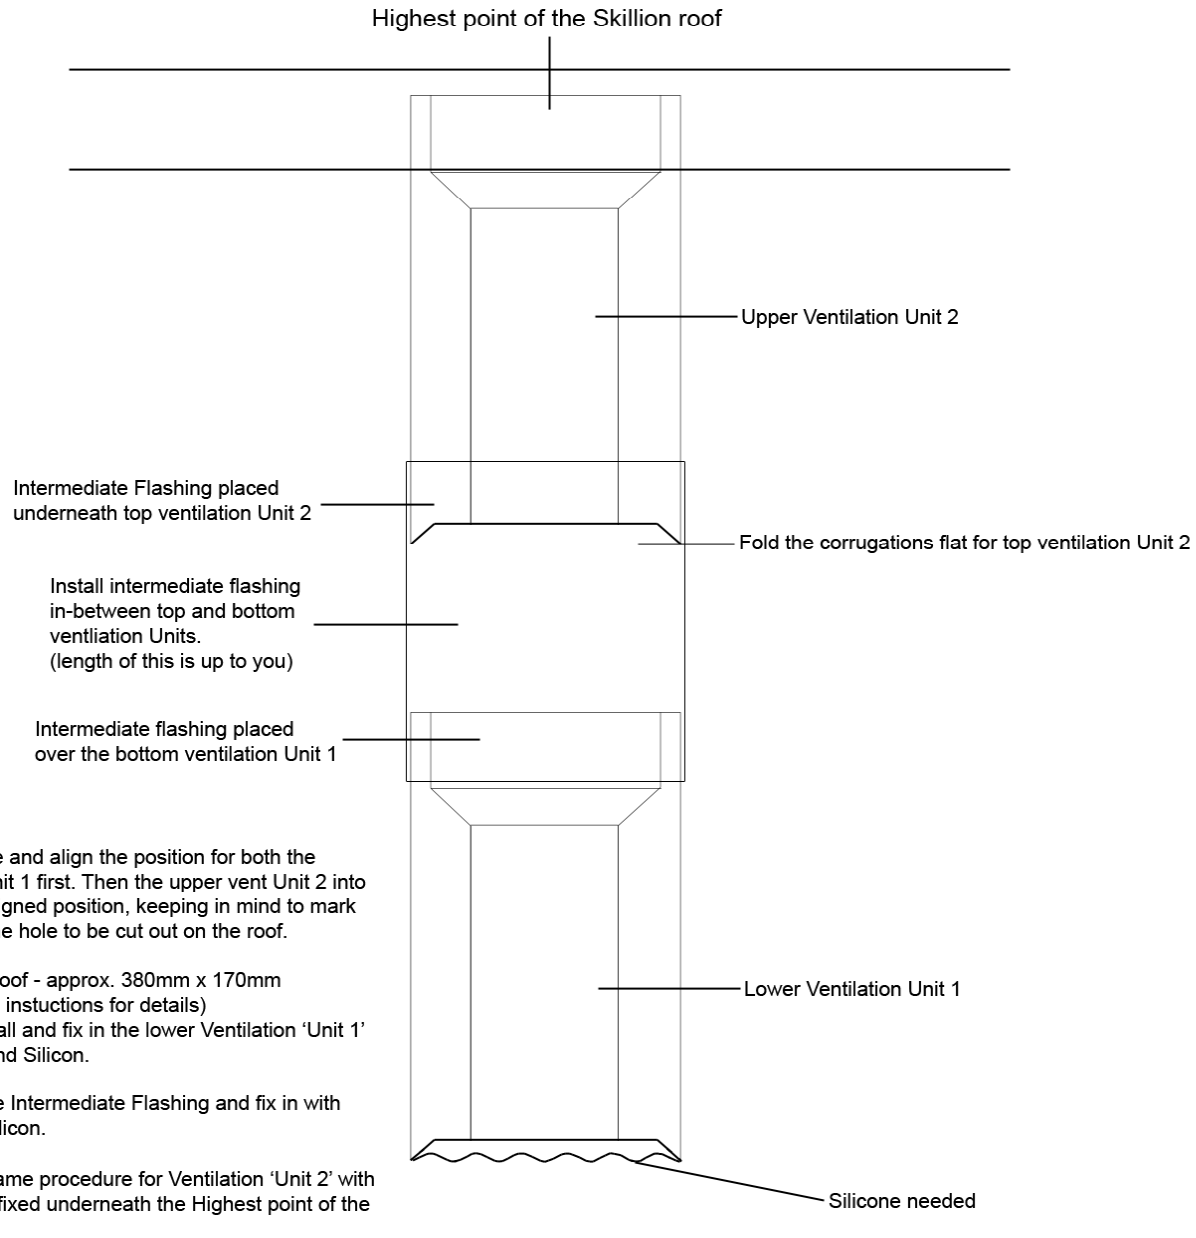

Side View Installation for Skillion Roofs

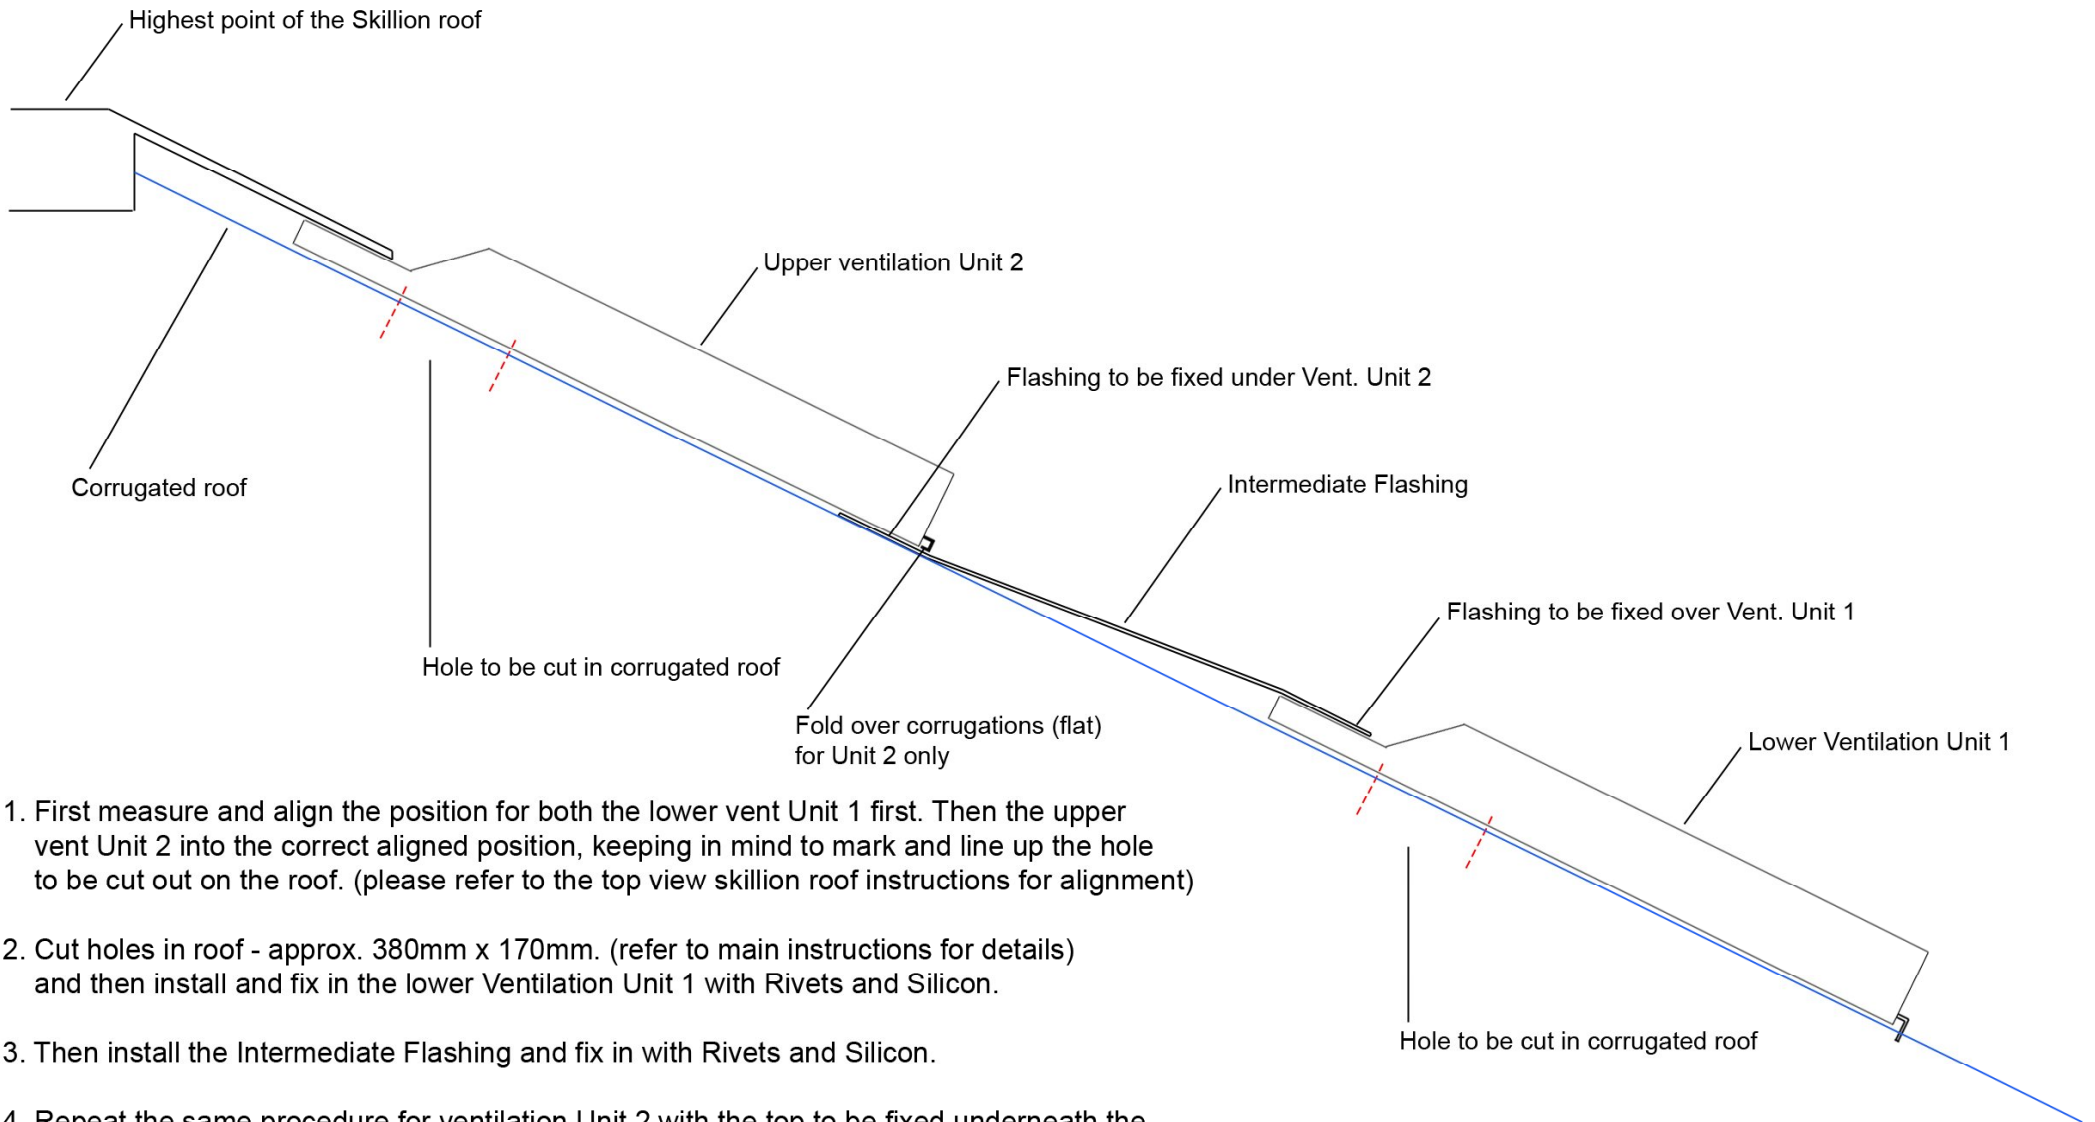

1. First measure and align the position for both the lower vent Unit 1 first. Then the upper vent Unit 2 into the correct aligned position, keeping in mind to mark and line up the hole to be cut out on the roof. (please refer to the top view skillion roof instructions for alignment)
2. Cut holes in roof - approx. 380mm x 170mm. (refer to main instructions for details) and then install and fix in the lower Ventilation Unit 1 with Rivets and Silicon.
3. Then install the Intermediate Flashing and fix in with Rivets and Silicon.
4. Repeat the same procedure for ventilation Unit 2 with the top to be fixed underneath the Highest point of the Skillion roof.